

**Specifications**

**Model Number:** 10-0055B  
**Input Voltage:** 220/240 VAC  
**Frequency:** 50/60 Hz.  
**Lamp Types:** See Chart On Next Page  
**Designed For:** Hygeaire® Ultraviolet Indirect Air Disinfection Units  
 Models LIND24-EVO AND LIND24-EVO-2PM  
**Certifications:** CSA (USA & Canada)  
**Size:** 7.5" (Max) x 2.5" x 1.75"  
**Weight:** 13 oz.  
**Mounting:** Slotted Mounting Tabs  
**Special Features:** Dimming Control



<p><b>USE WITH LAMP TYPES</b>          G10T5(-) L G18T6L          G24T6L G30T6L</p> <p>CLASS P INSTANT START,          OUTDOOR, DIMMABLE,          TYPE 1</p>	<p>Input Current 0.33A max.</p>	<p><b>Surelite</b> NO PCBs</p> <p><b>ELECTRONIC BALLAST</b></p> <p>BALLAST CASE MUST BE GROUNDED.          DISCONNECT INPUT POWER BEFORE          INSTALLING OR SERVICING.          START IS DELAYED. WAIT A FEW          SECONDS FOR LAMP TO LIGHT.          IF LED IS FLASHING OR OFF, CHECK          LAMP OR CONNECTIONS.</p> <p><b>DANGER</b>          HIGH VOLTAGE</p>
<p><b>10-0055B</b> </p> <p>220v 50/60 Hz</p>		
<p>631.273.0500          Fax: 631.273.0771          e-mail: info@ultraviolet.com          www.ultraviolet.com</p> <p><b>ATLANTIC ULTRAVIOLET</b>          CORPORATION          375 Marcus Boulevard, Hauppauge, NY 11788</p>		


The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.

**Lamp Types**


Instant Start	Preheat
G12T5L	GPH212T5L
G10T5½L*	GPH238T5L
G18T5L*	GPH250T5L
G18T5L/U*	GPH254T5L
G24T5L*	GPH287T5L
G24T5L/U*	GPH303T5L
G30T5L	GPH330T5L
G30T5L/U	GPH357T5L
G36T5L*	GPH436T5L
G36T5L/U*	GPH450T5L
G37T5L	GPH463T5L
G48T5L	GPH620T5L/4
G48T5L/U	GPH793T5L/4
G64T5L	GPH810T5L/4
G64T5L/U	GPH843T5L/4

\*For CSA Certified operation Canada & US.  
Lamps listed are Low Ozone type but Ozone Producing lamps in these same lengths can also be used. This ballast may be acceptable for use with lamps not listed here. Contact us to discuss your requirement.

**Connections**

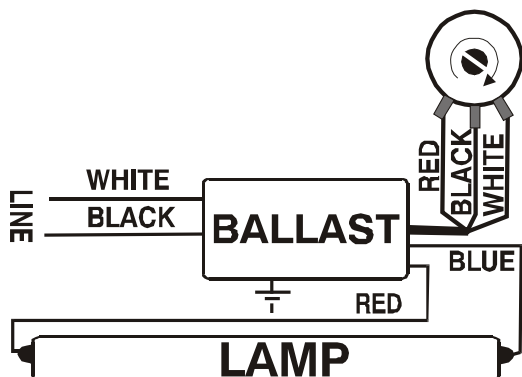

**Figure 1 - Typical connections from ballast for use with Instant Start Lamps**

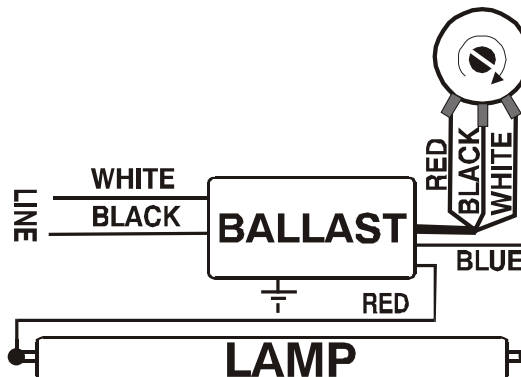

**Figure 2 - Typical connections from ballast for use with Preheat Lamps**

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.