



10-0137 - Surelite[™] Electronic Ballast

Specifications .

Model Number: 10-0137 Input Voltage: 120 VAC Frequency: 50/60 Hz. Lamp Types: See Chart On Next Page **Certifications:** UL #E191525 Size: 6.5" x 1.5" x 1.0" Weight: 10 oz. Slotted Mounting Tabs Mounting:



- 1. Add jumper between socket contacts, of the lampholder, before connecting the RED and YELLOW wires.
- 2. Ground case in accordance with the National Electric Code.
- 3. Remote mounting distance varies with lamp type, consult factory with requirements.
- 4. Cap and insulate any unused RED wire.
- 5. When connecting two RED wires, they must be joined to make one wire before connecting to the lampholder.



NEL CO SCRET ATTERNTICE CO RE O TATION UTRAVIOLET CO RE O TATION DE CORE O TATI	120V INPUT MAXIMUM CHRENT RFL EME SOUND RATING CLASS UND RATING CHRCUT OR TO GROUND INSTANT START MRL BALLAST START MRL ALAMP START	HIGH POWER FACTOR 120V AC SDISCHZ SEAMP FCC Part 18A A P 1 or 2 Outdoor 500 VMC Minus 20"F See Lamp Specs	Danger High Voltage! Baliati case must be grounded in accordance with National Electric Code. Disconnect input gover before installing or werking. For wiring information, see instruction sheet. APPROVED FOR LAW COMMINISTICS of # MAX.WITTS OF COMMISSION SPAN CRICKIL, UMAR TINO, TH, TIDA TINO LAWF, WENG SPER WING SPECE.	ELECTRONIC BALLAST ELECTRONIC BALLAST ELECTRONIC BALLAST USP USP USP USP USP USP USP USP USP USP
--	---	--	--	---

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation[®] and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.

375 Marcus Boulevard • Hauppauge, NY 11788 • USA • 631.273.0500 • Fax: 631.273.0771 • e-mail: info@ultraviolet.com • ultraviolet.com • buyultraviolet.com Document No. 98-1381 • Revised August 2015 • ©2015 by Atlantic Ultraviolet Corporation[®]






10-0137 - Surelite[™] Electronic Ballast

Lamp Types.

Lamp Types	Wiring Diagram
MightyPure [®] MP16A, Sanitron [®] S17A Lamp Part No. 05-1098-R	1
MightyPure [®] MP22A, Sanitron [®] S23A Lamp Part No. 05-1097-R	1
MightyPure [®] MP36C, Sanitron [®] S37C Lamp Part No. 05-1343-R	2
MightyPure [®] MP49C, Sanitron [®] S50C Lamp Part No. 05-1334-R	2
G12 - G48T5	2
GPH212 - GPH1148T5	1

This ballast may be acceptable for use with lamps not listed here. Contact us to discuss your requirement.

For 4 Pin Lamp Connections, Contact Factory.

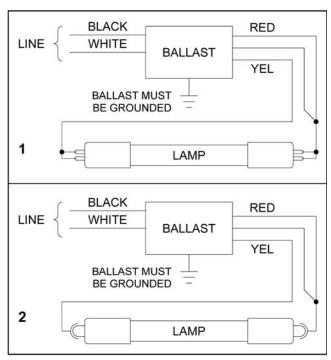

Wiring Diagrams

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation[®] and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.